

## Control Break Width

1058 GstarCAD Malaysia June 30, 2021 [Unique function](#) 0 3476

This function is used to set break width for Cross objects.

Menu : Express > GstarCAD Tools > Control Break Width

Command Entry : CBKWID

### Operation steps:

- 1.Start the command.
- 2.Enter the width of the break space.

Online URL: <https://www.gstarcad.com.my/knowledge/article/control-break-width-1058.html>