

## **Modify Text**

1059 GstarCAD Malaysia June 30, 2021 [Annotation](#) 0 4052

### **Text Height**

Menu : Express tools > GstarCAD Tools > Modify Text > Text Height

Command Entry : TXT40

- 1.Start the command
- 2.Select a single line text
- 3.Input text height
- 4.Press enter to finish the command

### **Width Factor**

Menu : Express tools > GstarCAD Tools > Modify Text > Width Factor

Command Entry : TXT41

- 1.Start the command
- 2.Select a single line text
- 3.Input Width height ratio
- 4.Press enter to finish the command

### **Angle**

Menu : Express tools > GstarCAD Tools > Modify Text > Angle

Command Entry : TXT50

- 1.Start the command
- 2.Select a single line text

3.Input rotation angle

4.Press enter to finish the command

### **Obliquing Angle**

Different to the rotation angle, after executing the command, the text will get an inclination deformation effect.

Menu : Express tools > GstarCAD Tools > Modify Text > Obliquing Angle

Command Entry : TXT51

1.Start the command

2.Select a single line text

3.Input tilt angle

4.Press enter to finish the command

### **Options Modify**

You can use this function to modify all the options above.

Menu : Express tools > GstarCAD Tools > Modify Text > Options Modify

Command Entry : EDTXT

Online URL: <https://www.gstarcad.com.my/knowledge/article/modify-text-1059.html>