

## List system Variable

1132 GstarCAD Malaysia April 3, 2016 [System Variables](#) 0 4222

To check the status of certain system variables, you can use the SETVAR command. After issuing the command, type? to begin the list, then apply an optional filter. For example entering DIM\* will show all the dimension variables.

Online URL: <https://www.gstarcad.com.my/knowledge/article/list-system-variable-1132.html>