

3DMOVE command

1201 GstarCAD Malaysia June 30, 2021 [3D CAD](#) 0 4177

The 3DMOVE command is used to move 3D model to the specified direction and distance.

Command

3DMOVE

Ribbon: 3D > 3D Operations > 3D Move

Menu: Modify > 3D Operations> 3D Move

Command Prompts


Select object:

Specify base point or [Displacement] <Displacement>:

Specify second point or <use first point as displacement>:

Function Description:

Users could move objects and sub objects freely or move constraint to specified axis or plane.

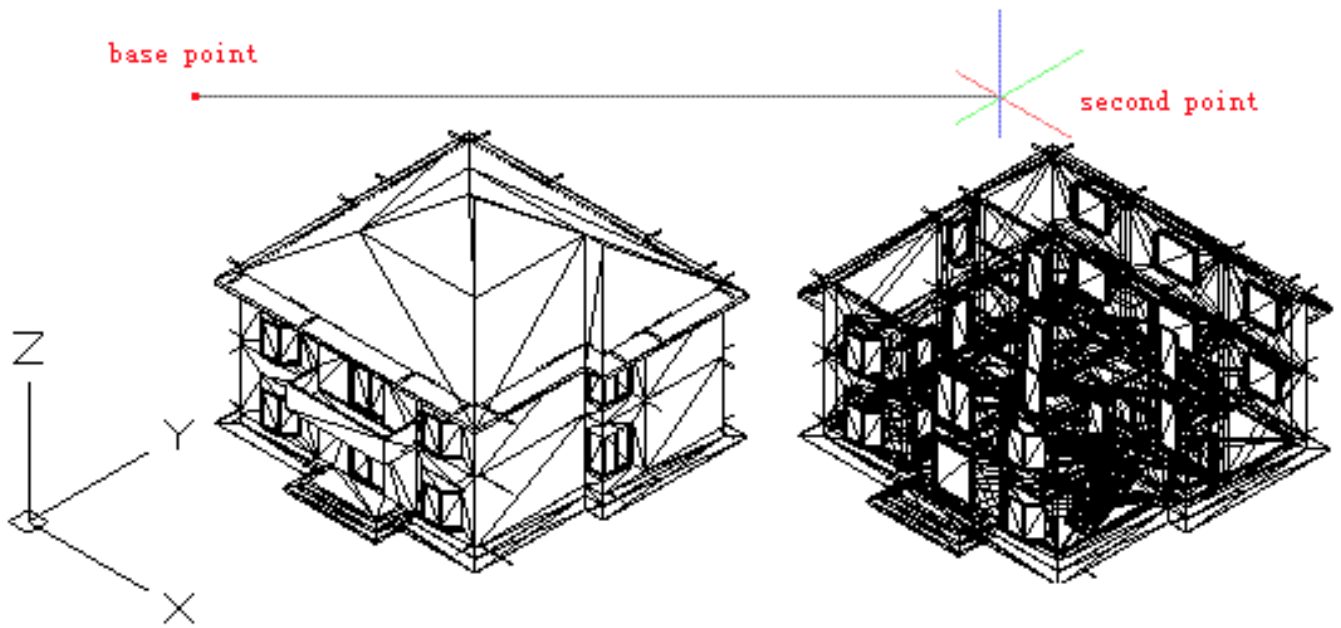

Relative Glossary:

- **Select object** : Select object to be moved and press ENTER.
- **Base point** : Specify base point of 3D object for moving.
- **Displacement** : Input the coordinate under the command prompt to specify the relative distance and direction of selected 3D object.
- **Second point** : Specify the final position for 3D object. Users could move cross cursor to specify direction or input displacement.

Online URL: <https://www.gstarcad.com.my/knowledge/article/3dmove-command-1201.html>