

# Free Scale

1237 GstarCAD Malaysia June 30, 2021 [Unique function](#) 0 3959


Command name: FREESCALE

FREESCALE command scales an object without restrictions under three modes; Non-Uniform, Rectangle and Free.

The Non-uniform scale allows to scale X and Y coordinate axis separately.

The RectScale allows to scale an object to match a rectangle frame. The rectangle does not need to be drawn, just specify two diagonal points.

The FreeScale allows to move or copy and scale objects in a closed quadrilateral frame to another closed quadrilateral frame, which can be used to generate a tilting hatch pattern or perspective distortion graphic.

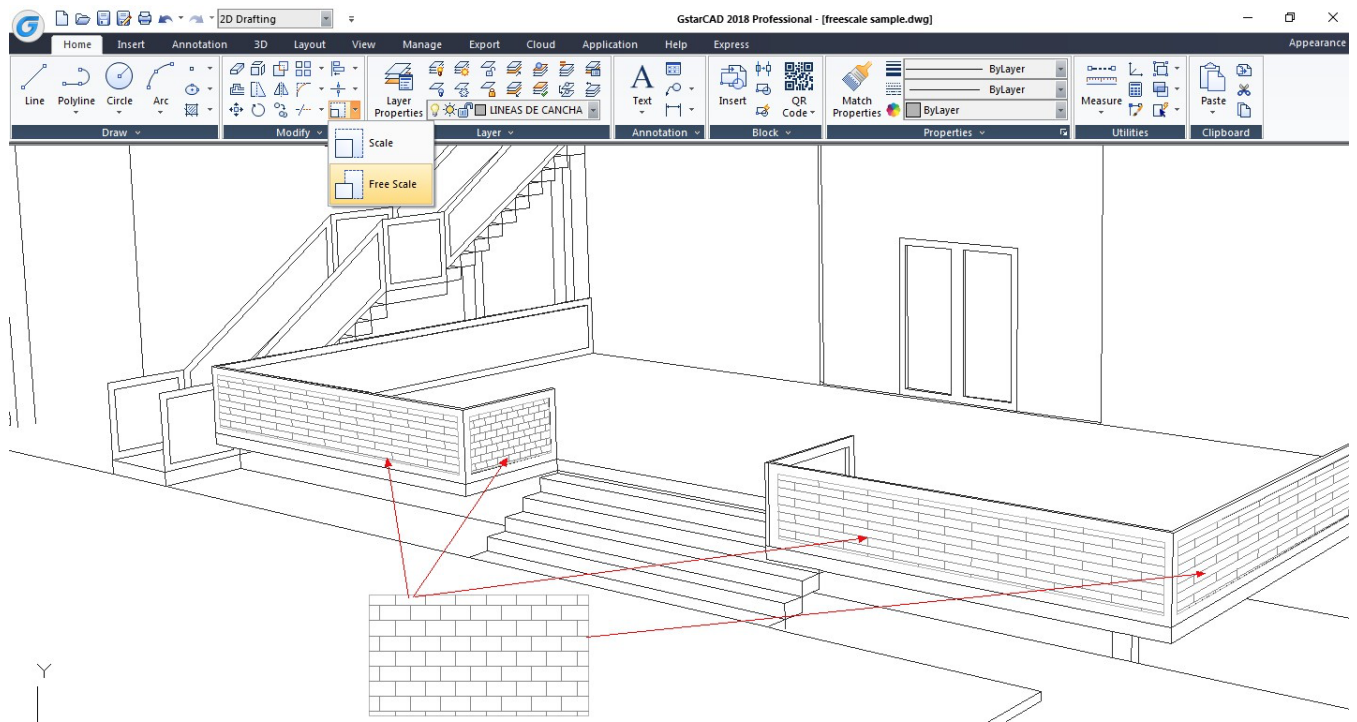

Online URL: <https://www.gstarcad.com.my/knowledge/article/free-scale-1237.html>