## Area Table

1239 GstarCAD Malaysia June 30, 2021 Annotation 0 3619


Command name: AREATABLE

AREATABLE command automatically dimension and count the area of anenclosed object and export the result to a table in the current drawing area.

The enclosed area or object can be marked with a number or area symbol, and the area table data can be generated at the same time.

The area data can be exported to a text or table file.

The values in the table can be changed automatically when the number or area size is changed.

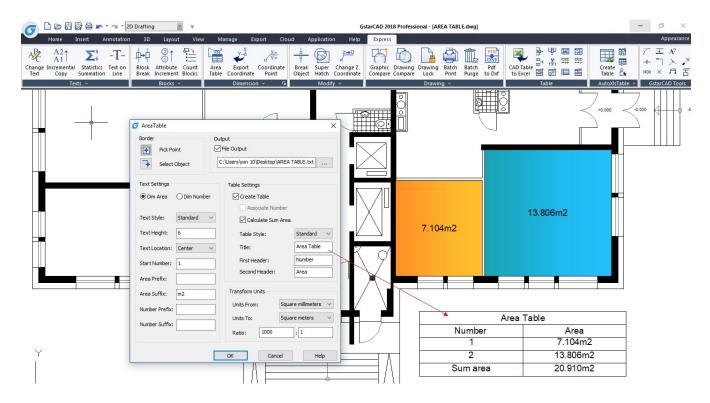

Online URL: https://www.gstarcad.com.my/knowledge/article/area-table-1239.html