

3DSELECTIONMODE system variable

1309 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2404

Function Description:

The **3DSELECTIONMODE** system variable is used to control the selection priority of both visually and physically overlapped objects in 3D visual styles.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : apply the traditional 3D selection priority

1: apply line of sight 3D selection priority for selecting 3D solids and surfaces. In addition, this setting could also provide selection priority for a defined object which associated with surfaces.

Note: if selected objects are in 2d wireframe or 3d wireframe styles, the **3DSELECTIONMODE** system variable has no effect.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/3dselectionmode-system-variable-1309.html>