

## **ACADLSPASDOC system variable**

1310 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2609

### **Function Description:**

The **ACADLSPASDOC** system variable is used to control whether load the gcad.lsp file to each opened drawings or the first opened drawing in a session.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : loads gcad.lsp into just the first drawing opened drawing in a session

**1** : loads gcad.lsp into every opened drawing

Online URL: <https://www.gstarcad.com.my/knowledge/article/acadlspasdoc-system-variable-1310.html>