

ACISOUTVER system variable

1311 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2452

Function Description:

The **ACISOUTVER** system variable is used to control the ACIS version of SAT files which created by ACISOUT command.

Type : Integer

Saved in : Not saved

Initial value : 70

Range : 15 ~ 120

Online URL: <https://www.gstarcad.com.my/knowledge/article/acisoutver-system-variable-1311.html>