

## **ACISOUTVER system variable**

1311 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2445

### **Function Description:**

The **ACISOUTVER** system variable is used to control the ACIS version of SAT files which created by ACISOUT command.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 70

**Range** : 15 ~ 120

Online URL: <https://www.gstarcad.com.my/knowledge/article/acisoutver-system-variable-1311.html>