

ADCSTATE system variable

1315 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2397

Function Description:

The **ADCSTATE** system variable is used to indicate whether the Design Center is in on or off mode.
(Read-Only)

Type : Integer

Saved in : Not saved

Initial value : Unknown

Range : 0,1

System Variable Value:

0 : off

1 : on

Online URL: <https://www.gstarcad.com.my/knowledge/article/adcstate-system-variable-1315.html>