

ANGBASE system variable

1317 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2457

Function Description:

The **ANGBASE** system variable is used to set the base angle to be 0 relative to current UCS.

Type : Real

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/angbase-system-variable-1317.html>