

## **ANGBASE system variable**

1317 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2455

### **Function Description:**

The **ANGBASE** system variable is used to set the base angle to be 0 relative to current UCS.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/angbase-system-variable-1317.html>