

ANGDIR system variable

1318 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 5947

Function Description:

The **ANGDIR** system variable is used to set the direction of positive angle. It is measures from angle 0 relative to the orientation of current UCS.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : anticlockwise

1 : clockwise

Online URL: <https://www.gstarcad.com.my/knowledge/article/angdir-system-variable-1318.html>