

## **ANNOALLVISIBLE system variable**

1319 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2559

### **Function Description:**

The **ANNOALLVISIBLE** system variable is used to hide or display annotative objects that do not support current annotation scales.

The **ANNOALLVISIBLE** system variable settings are saved separately for model and each layouts.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : only display annotative objects that support current annotation scales

**1** : display all annotative objects

Note : when the **ANNOALLVISIBLE** system variable has set to be 1, it only display one scale expression, even if the annotation objects support multiple scales

Online URL: <https://www.gstarcad.com.my/knowledge/article/annoallvisible-system-variable-1319.html>