

## **ANNOAUTOSCALE system variable**

1320 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2536

### **Function Description:**

The **ANNOAUTOSCALE** system variable is used to update annotative objects to support annotation scales when they are changed.

If the **ANNOAUTOSCALE** system variable is a negative number, it closes auto scale function, but settings reserved.

**Type** : Integer

**Saved in** : Registry

**Initial value** : -4

**Range** : -4 ~ 4

### **System Variable Value:**

**0** : the new set annotation scales has not added to annotation objects.

**1** : add new set annotation scales to annotative objects which support current scales except for those on layers that are turned off, frozen, locked or that are set to Viewport > Freeze.

**2** : add new set annotation scales to annotative objects which support current scales except for those on layers that are turned off, frozen or that are set to Viewport > Freeze.

**3** : add new set annotation scales to annotative objects which support current scales except for those on locked layers.

**4** : add new set annotation scales to all annotative objects which support current scales.

Online URL: <https://www.gstarcad.com.my/knowledge/article/annoautoscale-system-variable-1320.html>