

ANNOTATIVEDWG system variable

1321 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2556

Function Description:

The **ANNOTATIVEDWG** system variable is used to specify whether a drawing displaying as an annotation block when inserting to another drawing.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : non- annotative

1 : annotative

Note: if the drawing contains annotative objects, the **ANNOTATIVEDWG** system variable changes to be read-only.

Online URL: <https://www.gstarcad.com.my/knowledge/article/annotativedwg-system-variable-1321.html>