

## **APBOX system variable**

1322 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2647

### **Function Description:**

The **APBOX** system variable is used to control whether to turn the auto snap aperture box on or off.

The aperture box displays at the center of cross cursor when snapping objects.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : off

**1** : on

Online URL: <https://www.gstarcad.com.my/knowledge/article/apbox-system-variable-1322.html>