

APBOX system variable

1322 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2663

Function Description:

The **APBOX** system variable is used to control whether to turn the auto snap aperture box on or off.

The aperture box displays at the center of cross cursor when snapping objects.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : off

1 : on

Online URL: <https://www.gstarcad.com.my/knowledge/article/apbox-system-variable-1322.html>