

## **APERTURE system variable**

1323 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2420

### **Function Description:**

The **APERTURE** system variable is used to set the display size of object snap aperture box by pixels.

The name of this system variable is the same as command.

Users could also use SETVAR command to access this system variable.

Type : Integer  
Saved in : Registry  
Initial value : 10  
Range : 1 ~ 50

Users could input a value between 1 and 50.

The larger the number, the bigger the aperture box.

Users could also change its settings in Option > Draw tab.

**APERTURE** controls the object snap target box, not the pick box displayed at the Select Objects prompt.

The object selection pick is controlled by the PICKBOX system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/aperture-system-variable-1323.html>