

APERTURE system variable

1323 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2433

Function Description:

The **APERTURE** system variable is used to set the display size of object snap aperture box by pixels.

The name of this system variable is the same as command.

Users could also use SETVAR command to access this system variable.

Type : Integer
Saved in : Registry
Initial value : 10
Range : 1 ~ 50

Users could input a value between 1 and 50.

The larger the number, the bigger the aperture box.

Users could also change its settings in Option > Draw tab.

APERTURE controls the object snap target box, not the pick box displayed at the Select Objects prompt.

The object selection pick is controlled by the PICKBOX system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/aperture-system-variable-1323.html>