

AREA system variable

1325 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2575

Function Description:

The **AREA** system variable is used to store the last one area value calculated by AREA command.
(Read only)

Type : Integer

Saved in : Not saved

Initial value : 0.0000

The name of **AREA** system variable is the same as **AREA** command.

Online URL: <https://www.gstarcad.com.my/knowledge/article/area-system-variable-1325.html>