

## **AREA system variable**

1325 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2594

### **Function Description:**

The **AREA** system variable is used to store the last one area value calculated by AREA command.  
(Read only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0.0000

The name of **AREA** system variable is the same as **AREA** command.

Online URL: <https://www.gstarcad.com.my/knowledge/article/area-system-variable-1325.html>