

ATTDIA system variable

1326 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2318

Function Description:

The **ATTDIA** system variable is used to control whether it prompts to input attributes by dialog box when executing INSERT command.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : prompts to input attributes by commands

1 : input attributes by dialog box

Online URL: <https://www.gstarcad.com.my/knowledge/article/attdia-system-variable-1326.html>