

ATTIPE system variable

1327 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2884

Function Description:

The **ATTIPE** system variable is used to control the text format toolbar which displays together with in-place editor when modifying multiple text attributes.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 :display the abbreviated text format tool bar with in-place editor

1 : display the full text format tool bar with in-place editor

Online URL: <https://www.gstarcad.com.my/knowledge/article/attipe-system-variable-1327.html>