

ATTMODE system variable

1328 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2408

Function Description:

The **ATTMODE** system variable is used to control the display of object attributes.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0 ~ 2

System Variable Value:

0 : off; all attributes invisible

1 : normal; keep their current visibility of all attributes; display all visible attributes and hide all invisible attributes.

2 : on; all attributes visible

Online URL: <https://www.gstarcad.com.my/knowledge/article/attmode-system-variable-1328.html>