

## **ATTMODE system variable**

1328 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2418

### **Function Description:**

The **ATTMODE** system variable is used to control the display of object attributes.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0 ~ 2

### **System Variable Value:**

**0** : off; all attributes invisible

**1** : normal; keep their current visibility of all attributes; display all visible attributes and hide all invisible attributes.

**2** : on; all attributes visible

Online URL: <https://www.gstarcad.com.my/knowledge/article/attmode-system-variable-1328.html>