

## **ATTREQ system variable**

1330 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2288

### **Function Description:**

The **ATTREQ** system variable is used to control whether to use default attribute settings when inserting blocks by INSERT command.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : use their respective default value for all attributes

**1** : according to settings of ATTDIA system variable, to get attribute values by command prompts or dialog box

Online URL: <https://www.gstarcad.com.my/knowledge/article/attreq-system-variable-1330.html>