

## **AUDITCTL system variable**

1331 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2447

### **Function Description:**

The **AUDITCTL** system variable is used to control whether to create a ADT file when executing AUDIT command.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : forbid to write ADT files

**1** : write ADT files

Online URL: <https://www.gstarcad.com.my/knowledge/article/auditctl-system-variable-1331.html>