

## **AUNITS system variable**

1332 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2681

### **Function Description:**

The **AUNITS** system variable is used to set angle units.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0 ~ 4

### **System Variable Value:**

**0** : decimal degrees

**1** : degrees / minutes /seconds

**2** : gradian

**3** : radians

**4** : surveyor's units

Online URL: <https://www.gstarcad.com.my/knowledge/article/aunits-system-variable-1332.html>