

AUNITS system variable

1332 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2665

Function Description:

The **AUNITS** system variable is used to set angle units.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0 ~ 4

System Variable Value:

0 : decimal degrees

1 : degrees / minutes /seconds

2 : gradian

3 : radians

4 : surveyor's units

Online URL: <https://www.gstarcad.com.my/knowledge/article/aunits-system-variable-1332.html>