

## **AUPREC system variable**

1333 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2429

### **Function Description:**

The **AUPREC** system variable is used to set the display precious of angle units and ordinates.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0 ~ 8

No matter how to set precious value, it keeps the internal precious values for angles and ordinates. The **AUPREC** system variable has no effect on precious of annotation text.

Online URL: <https://www.gstarcad.com.my/knowledge/article/auprec-system-variable-1333.html>