

AUPREC system variable

1333 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2430

Function Description:

The **AUPREC** system variable is used to set the display precious of angle units and ordinates.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0 ~ 8

No matter how to set precious value, it keeps the internal precious values for angles and ordinates. The **AUPREC** system variable has no effect on precious of annotation text.

Online URL: <https://www.gstarcad.com.my/knowledge/article/auprec-system-variable-1333.html>