

BDEPENDENCYHIGHLIGHT system variable

1343 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2314

Function Description:

The **BDEPENDENCYHIGHLIGHT** system variable is used to control whether the selected parameters, actions, and grips and their dependent objects highlighted or not in block editor.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : specify the dependent objects not to be highlighted

1 : specify the dependent objects to be highlighted

Online URL:

<https://www.gstarcad.com.my/knowledge/article/bdependencyhighlight-system-variable-1343.html>