

BINDTYPE system variable

1346 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2497

Function Description:

The **BINDTYPE** system variable is used to control the way to deal with external reference name which is binding or in-place editing.

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : traditional binding way

1 : similar to INSERT

Online URL: <https://www.gstarcad.com.my/knowledge/article/bindtype-system-variable-1346.html>