

## **BINDTYPE system variable**

1346 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2491

### **Function Description:**

The **BINDTYPE** system variable is used to control the way to deal with external reference name which is binding or in-place editing.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : traditional binding way

**1** : similar to INSERT

Online URL: <https://www.gstarcad.com.my/knowledge/article/bindtype-system-variable-1346.html>