

BLIPMODE system variable

1347 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2550

Function Description:

The **BLIPMODE** system variable is used to control the visibility of marker blips.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : turn off marker blips

1 : turn on marker blips

This system variable has the same name as the **BLIPMODE** command.

Online URL: <https://www.gstarcad.com.my/knowledge/article/blipmode-system-variable-1347.html>