

## **BLOCKEDITOR system variable**

1349 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2592

### **Function Description:**

The **BLOCKEDITOR** system variable is used to indicate whether the block editor is open or not.  
(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : indicate the block editor is not open

**1** : indicate the block editor is open

Online URL: <https://www.gstarcad.com.my/knowledge/article/blockeditor-system-variable-1349.html>