

## **BPARAMETERCOLOR system variable**

1350 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2570

### **Function Description:**

The **BPARAMETERCOLOR** system variable is used to set parameter color in block editor.

**Type** : Strings

**Saved in** : Registry

**Initial value** : 170

**Range** : 1 ~ 255

The valid value includes **BYLAYER**, **BYBLOCK**, and integers from 1 to 255. The True color is a strings with RGB in front and each value is separated by a comma. It is entered as the following way:  
RGB:000,000,000

Online URL:

<https://www.gstarcad.com.my/knowledge/article/bparametercolor-system-variable-1350.html>