

BPTEXTHORIZONTAL system variable

1353 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2413

Function Description:

The **BPTEXTHORIZONTAL** system variable is used to force the text of action parameters and constraint parameters displaying in horizontal way.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : align the text and parameter dimension line

1 : the action parameter and constraint parameter text display in horizontal way in block editor

The **BPTEXTHORIZONTAL** system variable is applicable to action parameters and block constraint parameters.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/bptexthorizontal-system-variable-1353.html>