

BTMARKDISPLAY system variable

1354 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2487

Function Description:

The **BTMARKDISPLAY** system variable is used to control whether to display value set marker for dynamic block reference.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : specify to not display value set marker

1 : specify to display value set marker

Online URL: <https://www.gstarcad.com.my/knowledge/article/btmarkdisplay-system-variable-1354.html>