

## **BVMODE system variable**

1355 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2740

### **Function Description:**

The **BVMODE** system variable is used to control the display way of hidden object under current visibility state in block editor.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : specify the hidden object to be invisible

**1** : specify the hidden object to be visible but in dark

Online URL: <https://www.gstarcad.com.my/knowledge/article/bvmode-system-variable-1355.html>