

CANNOSCALE system variable

1356 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2473

Function Description:

The **CANNOSCALE** system variable is used to set name for current annotative scale in current space.

Type : Strings

Saved in : Drawing

Initial value : 1:1

Users could only input the named scales listed in scale list.

Online URL: <https://www.gstarcad.com.my/knowledge/article/cannoscale-system-variable-1356.html>