

CANNOSCALEVALUE system variable

1357 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2288

Function Description:

The **CANNOSCALEVALUE** system variable is used to display the current annotative scale.
(Read-Only)

Type: Real

Saved in : Drawing

Initial value : 1.0000

Online URL:

<https://www.gstarcad.com.my/knowledge/article/cannoscalevalue-system-variable-1357.html>