

CDATE system variable

1358 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2404

Function Description:

The **CDATE** system variable is used to save current date and time by decimal type of codes.
(Read-Only)

Type : Real

Saved in : Not saved

Initial value : unknown

The date and time is shown by decimal type beginning with the year. After the decimal point, **CDATE** displays the time using a 24-hour clock.

Online URL: <https://www.gstarcad.com.my/knowledge/article/cdate-system-variable-1358.html>