

## **CELTSCALE system variable**

1360 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2230

### **Function Description:**

The **CELTSCALE** system variable is used to set scale factors for current object line type.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 1.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/celtscale-system-variable-1360.html>