

CELTYPE system variable

1361 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2159

Function Description:

The **CELTYPE** system variable is used to set new object line types.

Type : Strings

Saved in : Drawing

Initial value : BYLAYER

Online URL: <https://www.gstarcad.com.my/knowledge/article/celtype-system-variable-1361.html>