

## **CELWEIGHT system variable**

1362 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2467

### **Function Description:**

The **CELWEIGHT** system variable is used to set new object line weight.

Type : Integer

Saved in : Drawing

Initial : value -1

Range : -1,-2,-3,0,5,9,13,15,18,20,25,30,35,40,50,53,60,70,80,90,100,106,120,140,158,200,211

All values must be entered in hundredths of millimeters.

### **System Variable Value:**

-1 : set the line weight to be BYLAYER

-2 : set the line weight to be BYBLOCK

-3 : set the line weight to be DEFAULT. The DEFAULT value is determined by LWEDFAULT system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/celweight-system-variable-1362.html>