

## **CETRANSPARENCY system variable**

1364 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2394

### **Function Description:**

The **CETRANSPARENCY** system variable is used to set the transparency level for new objects.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : BYLAYER

**Range** : BYLAYER, BYBLOCK, 0, 1 ~ 90

Users could change transparency states by "Properties" palettes or "Layer Property Manager".

Note: limit the transparency to be 90% to avoid confusion of layer closed or frozen.

Online URL: <https://www.gstarcad.com.my/knowledge/article/cetransparency-system-variable-1364.html>