

CHAMFERA system variable

1365 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2438

Function Description:

The **CHAMFERA** system variable is used to set the first chamfer distance when CHAMMODE has set to be 0.

Type : Real

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/chamfera-system-variable-1365.html>